

Dartboard and Scores

TARGET NUMBER&AREA
This number is added as a score in this area.

TOUCH SENSOR
Finish a round, touch this area and change to the next.

LED LAMP
Show Bluetooth status
Blinking red : Standby
Solid blue : Connected

POWER SWITCH

DOUBLE AREA
Here is double the number added to a score.

TRIPLE AREA
Here is triple the number added to a score.

SINGLE AREA
The number is added to a score.

BULL (center)
Here is 50 points added to a score.

GRANBOARD will go into sleep mode if any of operations haven't done for 10 minutes when using USB. Touch the area to restore from sleep mode.

How to throw darts

1 SETUP

Set (a dart) at the front of a face. Refer to the picture.

2 TAKE BACK

Fold up arms and get closer toward a face.

3 THROW

Swing arms straight and throw a dart.

You can throw three darts each round. Don't forget it as basic of darts.

O1 GAME

The Most Standard and Popular Darts Game

Max Rounds 20 rounds
1 round 3 darts

O1 GAME is a very simple game. At the start of a game, choose one from these numbers (Start Number).

Throw three darts each round. Points earned are deducted from Start Number. A game is finished when Start Number is reached exactly at zero. If you make the number under zero, it is considered as BUST which gets back before throwing in a round. If you can't finish the number until Round 20, the game is over.

When playing with some players, a player who reaches at zero at first is a winner. Let's try how fast you can finish it when playing alone. Tap O1 GAME and choose a number you want to play.

You can play this game from the screen below.

GAME SELECT Select the button.

Application top screen

Select O1 GAME and it will be displayed on the right. Please select the game screen of your choice.

Game select screen

STANDARD CRICKET

Use Tactics to Attack and Defend! Domination Game!

Max Rounds 20 rounds
1 round 3 darts

STANDARD CRICKET is a tactics game as popular as O1 GAME. This game uses seven areas on the board. [20 / 19 / 18 / 17 / 16 / 15 / BULL]

One single shot is counted as one mark [/] , two as two marks [X] , and three as three marks [X] . Then the area becomes yours. One Triple shot is considered as three marks. After making an area turned to yours, earn points when hitting there.

In a match, an opponent marks three in your area. Then it becomes closed and you can't earn points there.

A player who occupies all seven areas and has the highest score is a winner. Add points or close an opponent area. Switch attack or defense to get a win.

You can play this game from the screen below.

GAME SELECT Select the button.

Application top screen

Select CRICKET and appear on the right side. Please select the screen of STANDARD CRICKET.

Game select screen

COUNT UP

Shoot at Bull for the Highest Score!

Max Rounds 8 rounds
1 round 3 darts

COUNT UP is very simple, but also interesting. Three darts a round, and all eight rounds. This is a game of how many points you can earn with total 24 darts.

Even though playing with some player, all players throw 24 darts in total eight rounds. A player who has the highest score is a winner.

Two circles at the center of the board mark 50 points. How many times you shoot at the center is going to be a key to get a win in this game.

If you shoot all 24 darts at the center, total is 1200 points. For beginners, why don't you mark 500 at first?

You can play this game from the screen below.

GAME SELECT Select the button.

Application top screen

Select PRACTICE and display on the right side. Please select COUNT UP game screen.

Game select screen

3 Steps to Start Darts Game

STEP1 Preparing the app and registering an account

■ Download App from Stores in a Smart Phone or Tablet

App Name
GRAN BOARD
(Free to download)
アプリ内課金があります

Download on the App Store | GET IT ON Google play

Recommended device for using the app
iOS device with iOS 11 or later Android device with Android OS 6.0 or later, main memory 3GB or more
※ GRANBOARD app is designed for smartphones and tablets. The app may not operate properly on some devices (Android TV Box, Chromebook, etc.).

■ After Successfully Download App, Prepare for Making a New Account.

Enter Email, Gran ID and Password for a New account

※ Please keep email address and password because they are required to log in when re-install the app in other device or share one account with others.

STEP2 Create a player card

■ Make Player Card to Manage Play Data

Setting Player Icon
Tap on the camera icon and it brings you to camera roll. Select your favorite image for your player icon.

Setting Player Name
Register your player name which appears on your player card
(Background is also customizable from MY PAGE)

Various of convenience features are available after you register a player card.

Manage Play Data Details

Customize Game Screen

Online Play

Communicate with darts friends

Send messages to other players

Check world rankings

STEP3 Starting GRANBOARD / Bluetooth Connection

■ Start GRANBOARD and Connect The App to Your Device

* USB power supply is required for LED effects. (USB Type-C)

Start GRANBOARD with USB

The USB Type-C port is located directly at bottom of the board. Please plug in the USB cable there.

LED light beside the power switch flashes in red as you turn the power on. The app connects to the board automatically, then LED light becomes green. Setting is completed when the app successfully connects to the board.

In the case of connection could not be done successfully, follow the connecting navigation which you can find in HELP on the bottom of home screen.

GRAN OFFICIAL WEBSITE
www.gran-darts.com

Warranty

Warranty Content if GRAN BOARD is broken within warranty period even though using appropriately, please ask a shop you purchased, or Support Center.
(Please keep the receipt. We require you to show us.)

Please be careful. You CAN NOT receive supports if losing the receipt

Warranty Period 3 month after the purchase

Name

Phone Number

Email Address

Address

Attention

Attention to Safety ● Don't throw darts at person and animals. There is a danger of a wound, or being blind. ● Please don't play around children. If a dartboard is fallen down, it is dangerous. ● The point of darts is like a needle on purpose, so please don't use without darts game. ● Be careful of an electric shock. Please don't touch with wet hands. ● Please hang a dartboard on solid wall to hold. ● If hanging a dartboard on weak wall like plaster, There is a danger of the fall down of dartboard. ● Please make sure that there is no person, animal, and something easy to break around a dartboard when throwing darts. ● After playing darts, please put darts at places where children can't touch.

Attention to Play ● It requires preparing iOS or Android smartphones or tablets for darts game. You can't play only with GRAN BOARD. ● Please make sure whether your devices are compatible with GRAN BOARD App. ● GRAN BOARD is only available for soft tip darts. Don't use steel tip darts. It causes damages and troubles of GRAN BOARD. ● The use of heavy darts is a cause of damages and deterioration. ● The wall might be hurt if you miss throwing darts and hit at the wall. ● Please don't do baseball throwing. GRAN BOARD becomes damaged, broken, or deformation. ● Don't use and put GRAN BOARD at places where it is hot, humid, and under the sunlight. ● GRAN BOARD is not waterproof. Please don't get GRAN BOARD wet. ● This product is for home use only. The manufacturer will not be responsible for any manufacturing liability or warranty for using in others like commercial usage.

Support Center support@gran-darts.com Business hours AM 10:00—PM 19:00 We also receive inquiries from Facebook Message. <https://www.facebook.com/granboard.official/>